


ACCESSORY WIRING KIT

(Must convert all electrical components to 12 volts on vehicles prior to 1967)

<u>Wire Color</u>	<u>Wire Gauge</u>	<u>Printing</u>	<u>Function</u>
Brown	16	Radio Bat	Main power from panel connection #3 (Radio) to radio.
Dark Green	14	Horn	Main power from panel connection #13 (Horn Power) to horn power.
Black	18	Horn Relay Ground	Lead from panel connection #12 (Horn Switch) to horn ground lead in steering column.
Yellow	16	Radio Bat	Main power from panel connection #8 (Bat 1) to radio.
Black / Yellow	16	(no printing)	Optional - fresh air fan switch to fan.
Black / Green	16	(no printing)	Optional - fresh air fan switch terminal 33F to fan terminal 33F (1971).
Black / Red	16	(no printing)	Optional - fresh air fan switch terminal 33F to fan terminal 33F (1972-up).
Orange	14	Electric Fan	Main power from panel connection #1 (ACCY 1) to fresh air fan switch.
Black	16	Ground	Optional - fresh air fan ground wire.
White	18	CTSY Ground	Courtesy light & door switch ground wire.
Orange	18	12V Battery Fused	Main power from panel connection #9 (Dome/Stop) to courtesy lights

1962-70 Beetle - Accessory Connections

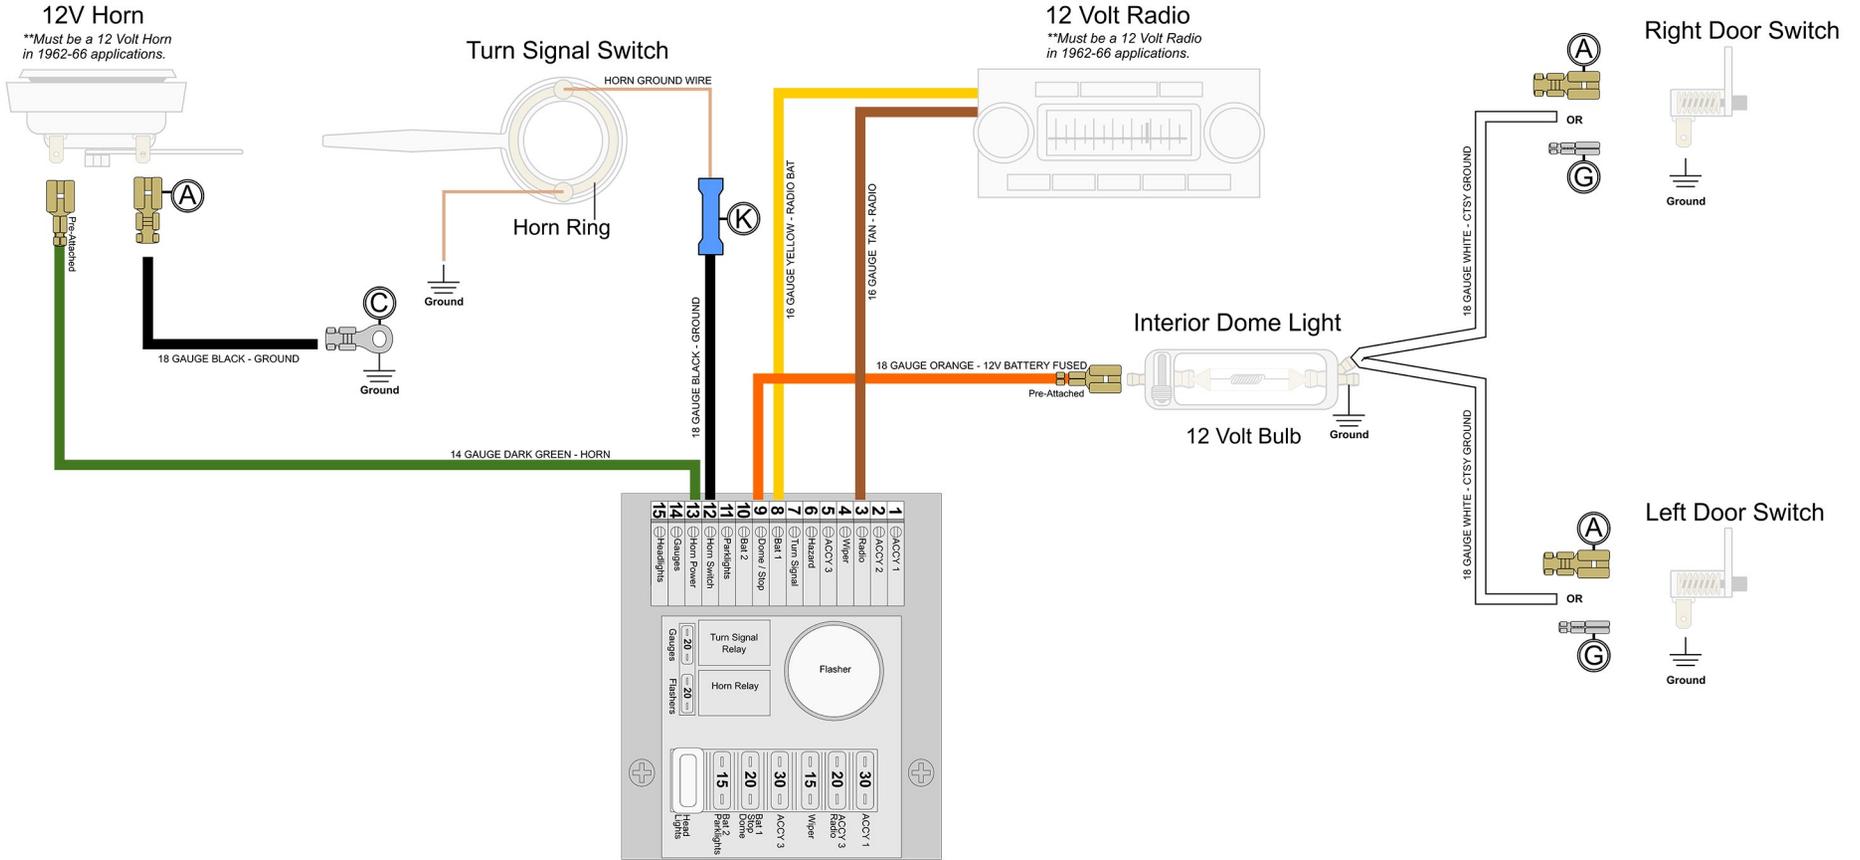

1971-74 Beetle - Accessory Connections

